


Ceiling PIR motion detector
with lighting feature (surface mount)

SLIM-S-PIR-LUNA

Firmware version 3.00

EN

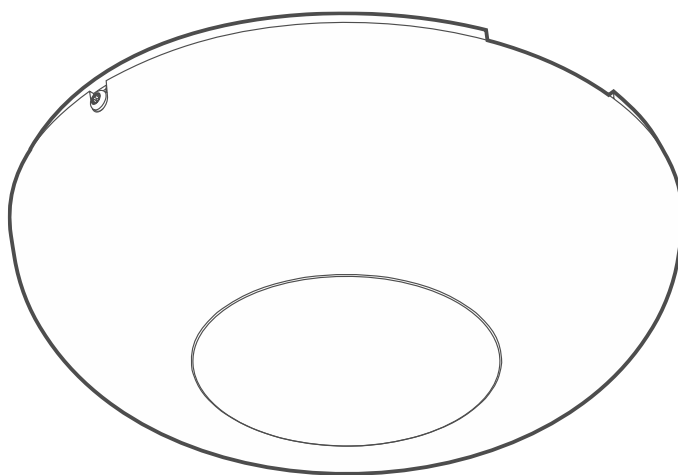

slim-s-pir-luna_en 04/26

IMPORTANT

The device should be installed by qualified personnel.

Prior to installation, please read carefully this manual.

Changes, modifications or repairs not authorized by the manufacturer shall void your rights under the warranty.

Description of symbols on the device:



Direct current (DC).



The device meets the requirements of the applicable EU directives.



The device is designed for indoor installation.



The device must not be disposed of with other municipal waste. It should be disposed of in accordance with the existing rules for environment protection (the device was placed on the market after 13 August 2005).

SATEL aims to continually improve the quality of its products, which may result in changes in their technical specifications and software. Current information about the changes being introduced is available on our website.

Please visit us at:
<https://support.satel.pl>

The declaration of conformity may be consulted at www.satel.pl/ce

Signs in this manual



Caution – information on the safety of users, devices, etc.



Note – suggestion or additional information.

CONTENTS

1.	Features	2
2.	Description.....	2
	Tamper protection	2
	Lighting feature	2
	Supervision features	3
	LED indicator	3
	Remote switching between PIR sensor sensitivity.....	3
	Remote configuration mode enabling / disabling	4
3.	Electronics module	4
	Terminals.....	5
	DIP-switches.....	5
4.	Installation	6
	Tips for installation.....	6
	Mounting.....	7
5.	Configuring the detector using the buttons / keyfob.....	10
	Description of detector buttons	10
	Description of keyfob buttons	10
	Starting configuration mode.....	10
	Configuring the settings	10
	Restoring factory settings	11
	Ending configuration mode	12
6.	Walk test.....	12
7.	Specifications	12

The SLIM-S-PIR-LUNA ceiling detector uses infrared to detect motion. It also provides a lighting feature. It is designed for mounting on the surface of the ceiling. This manual applies to the detector with electronics version D.

1. Features

- Motion detection using passive infrared sensor (PIR).
- Maximum coverage area (see Fig. 21):
 - $\varnothing$ 6 m / 28 m² – mounted at 2.4 m,
 - $\varnothing$ 10 m / 79 m² – mounted at 3.5 m.
- Digital motion detection algorithm.
- Digital temperature compensation.
- Adjustable detection sensitivity.
- Possibility to configure the detector settings using the OPT-1 keyfob (available in the SATEL product range).
- Built-in end-of-line resistors (2EOL: 2 x 1.1 k Ω / 2 x 4.7 k Ω / 2 x 5.6 k Ω).
- Lighting feature implemented using LEDs:
 - possibility to control the lighting remotely,
 - motion-activated lighting.
- LED indicator:
 - selectable lighting color (7 colors available),
 - indicator enabled / disabled remotely.
- Configuration mode enabled / disabled remotely.
- Supervision of motion detection system.
- Powered by 12 VDC ($\pm$ 15%).
- Supply voltage control.
- Tamper protection against enclosure opening and removal from mounting surface.
- Mounted on the surface of the ceiling.

2. Description

The detector will report alarm when the infrared sensor (PIR) detects motion.

Tamper protection

Enclosure opening / removal of the detector from the mounting surface results in activating the tamper output. The output will remain activated until the end of tamper.

Lighting feature

The light sources are white LEDs. The following lighting operation modes are available:

- remote control only – the lighting is ON when the LUNA terminal is connected to common ground (if the LUNA terminal is disconnected from common ground, the lighting is OFF),
- remote control and motion activation – the lighting is ON when the LUNA terminal is connected to common ground, or the detector has detected motion,
- motion activation if the LUNA terminal is connected to common ground – the lighting is ON when the LUNA terminal is connected to common ground and the detector has detected motion (if the LUNA terminal is disconnected from common ground, motion detection will not activate the lighting).

If activated by motion, the lighting remains ON for the time period programmed in the detector. If the lighting is ON and motion is detected, the countdown starts anew.

For description of the lighting feature configuration, see section *Configuring the detector using the buttons / keyfob* p. 10.

Supervision features

In the event of the voltage drop below 9 V ($\pm 5\%$) for more than 2 seconds or the motion detection system failure, the detector will indicate a trouble. The trouble is indicated by activating the alarm output and turning on the LED indicator. The signaling continues for the duration of the trouble.

LED indicator

The LED indicator indicates:

- warm-up – flashing alternately different colors for about 30 seconds,
- alarm – ON for 2 seconds (default color: blue),
- trouble – ON for the duration of the trouble (the same color of lighting as in the case of alarm).

You can change the color. You can select one of seven available colors (see *Configuring the detector using the buttons / keyfob* p. 10).

Enabling the LED indicator using the DIP-switch

If you enable the LED indicator using the switch (set the 8 switch in ON position – Fig. 8), the indicator will indicate events but it will be impossible to enable / disable the indicator remotely. If you disable the LED indicator using the switch (Fig. 9), it will be possible to enable / disable the indicator remotely.

Enabling / disabling the LED indicator remotely

The LED terminal is provided to allow the LED indicator to be controlled remotely. The LED indicator is enabled when the terminal is connected to common ground. The LED indicator is disabled when the terminal is disconnected from common ground.

You can connect to the terminal an OC type alarm control panel output programmed e.g. as:

- INTEGRA / INTEGRA Plus: *Zone test status* or *BI switch*,
- PERFECTA / VERSA: *Controlled*.

Remote switching between PIR sensor sensitivity

The SENS terminal is provided to allow remote switching between PIR sensor detection sensitivity. The first sensitivity is used when the terminal is disconnected from common ground. The second sensitivity is used when the terminal is connected to common ground.

This makes it possible to change the PIR sensor sensitivity depending on the state of partition to which the detector is assigned. If the partition is disarmed, the maximum sensitivity can be set to increase the efficiency of lighting activation by motion. If the partition is armed, the lower sensitivity can be set to eliminate false alarms.

You can connect to the terminal an OC type alarm control panel output programmed e.g. as:

- INTEGRA / INTEGRA Plus: *Armed status*,
- PERFECTA / VERSA: *Controlled*.

For description of the PIR sensor sensitivity configuration, see section *Configuring the detector using the buttons / keyfob* p. 10.

Remote configuration mode enabling / disabling

The SRVC terminal is provided to allow remote configuration mode enabling / disabling. The configuration mode is enabled, when the terminal is connected to the common ground.

You can connect to the terminal an OC type alarm control panel output programmed e.g. as:

- INTEGRA / INTEGRA Plus: *Service mode status* or *BI switch*,
- PERFECTA / VERSA: *Controlled*.

3. Electronics module



Do not remove the electronics board from the plastic cover to avoid damage to the components on the board.


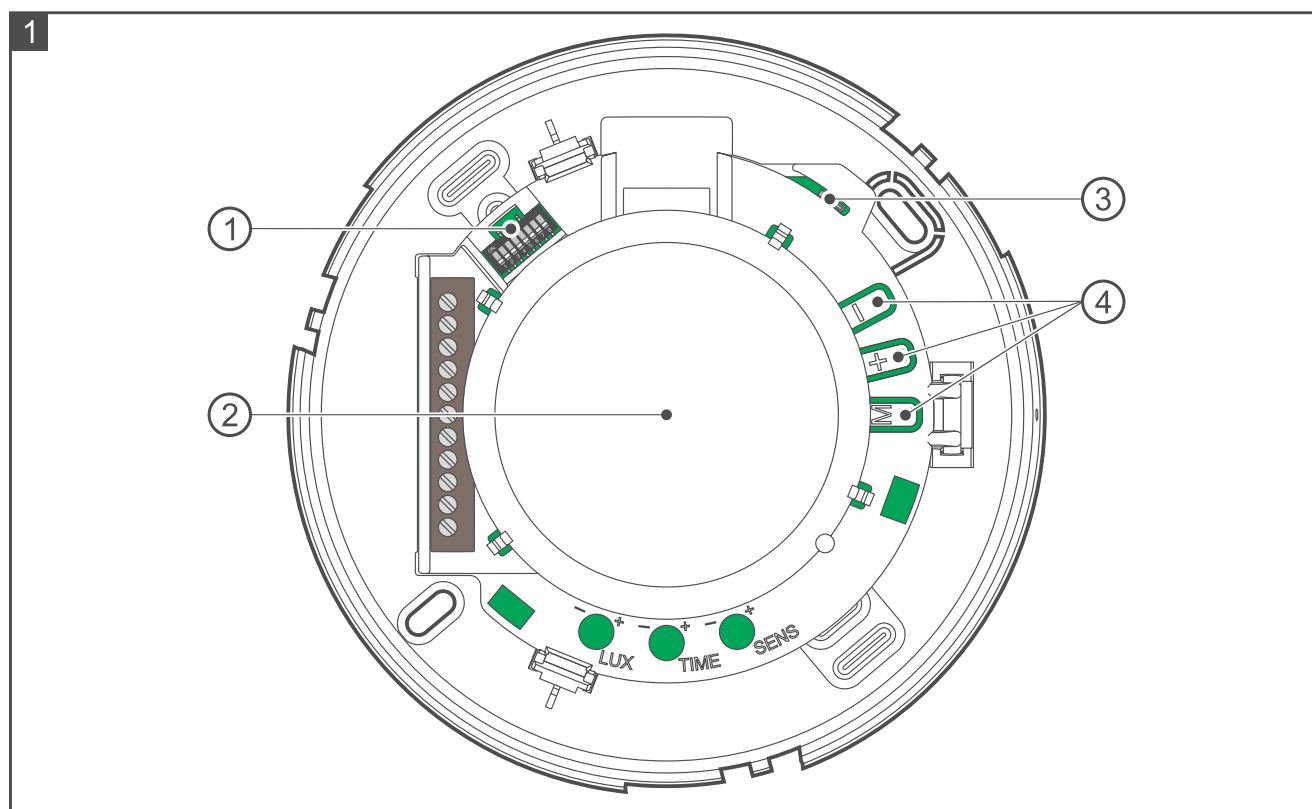


Figure 1 shows the inside of the detector after opening the enclosure.

- (1) DIP-switches used for configuring the detector (see *DIP-switches* p. 5).
- (2) lens.
- (3) tamper switch activated by cover removal.
- (4) buttons used for configuring the detector (see *Configuring the detector using the buttons / keyfob* p. 10).

Under the lens there are: PIR sensor (dual element pyrosensor), LED indicator, LEDs for lighting and infrared receiver for configuring the detector using the OPT-1 keyfob. The tamper switch activated by removing the detector from the surface is on the other side of the electronics module.

Terminals

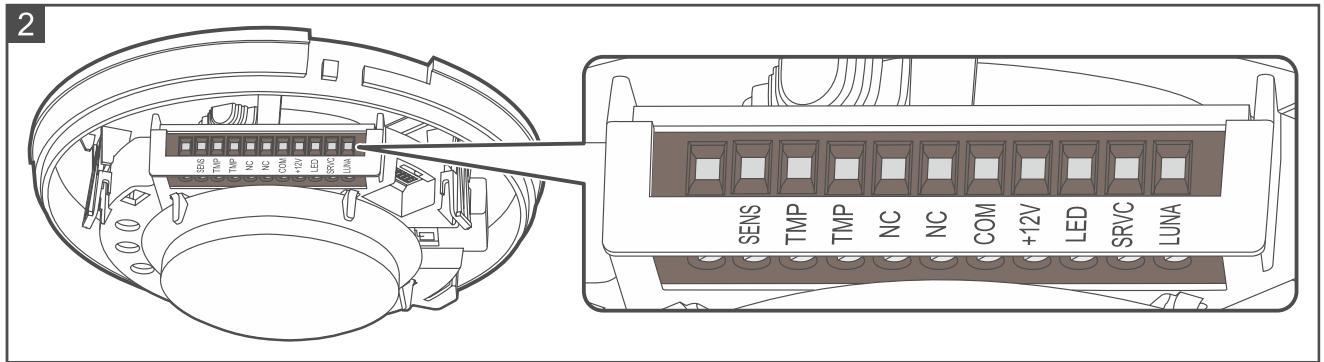


- SENS** - switching between PIR sensor sensitivity.
- TMP** - tamper output (NC relay).
- NC** - alarm output (NC relay).
- COM** - common ground.
- +12V** - power input.
- LED** - enabling / disabling the LED indicator.
- SRVC** - enabling / disabling the detector configuration mode.
- LUNA** - LED lighting control.

DIP-switches

Using the DIP-switches, you can:



- configure the detector outputs – switches 1...6 (Fig. 4, 5, 6 and 7),
- enable / disable the LED indicator – switch 8 (Fig. 8 and 9).


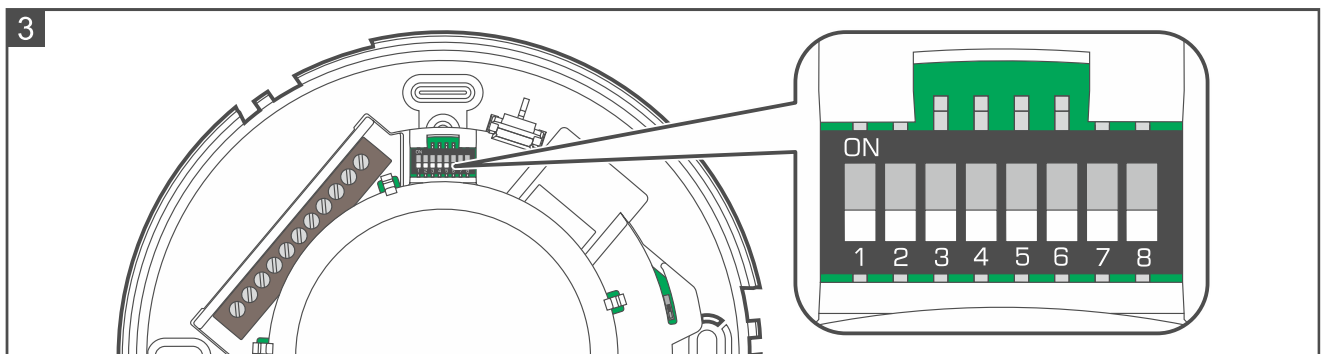


Configuring the detector outputs

Available settings are shown in the figures:

- 4...6 – built-in resistors are used – connect the detector outputs as in Fig. 20,
- 7 – built-in resistors are not used – connect the detector outputs as in Fig. 19.

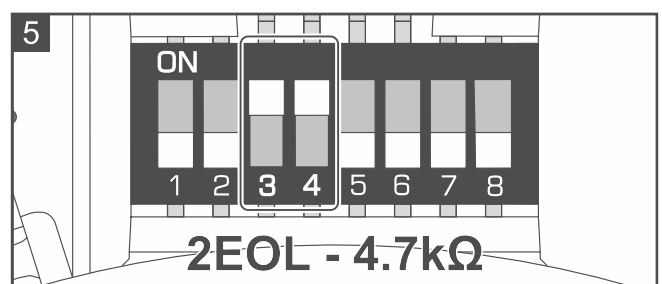
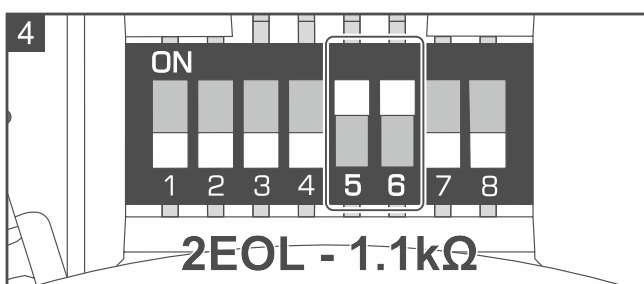


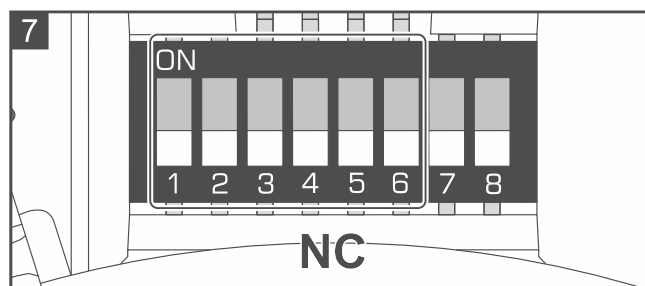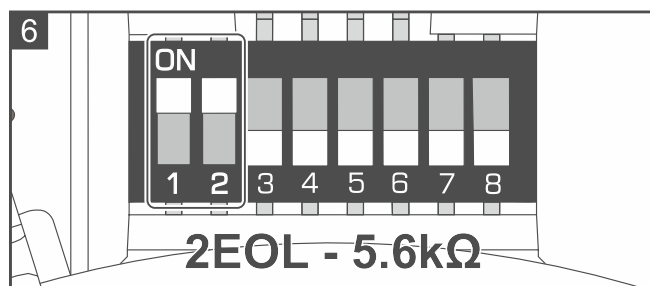

Enabling / disabling the LED indicator

Available settings are shown in the figures:

- 8 – LED indicator is enabled,
- 9 – LED indicator is disabled.

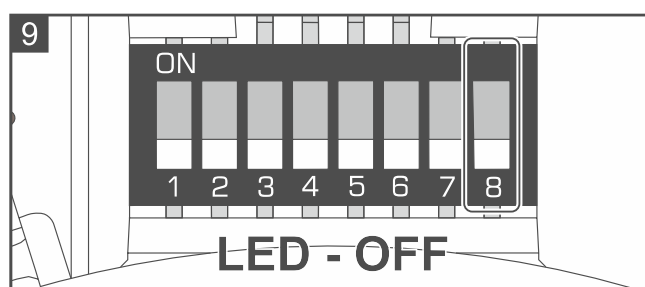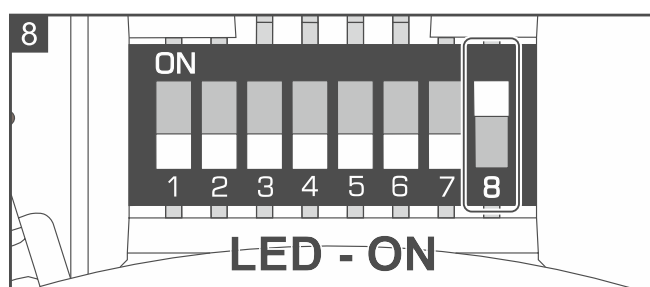


4. Installation



Disconnect power before making any electrical connections.

Tips for installation

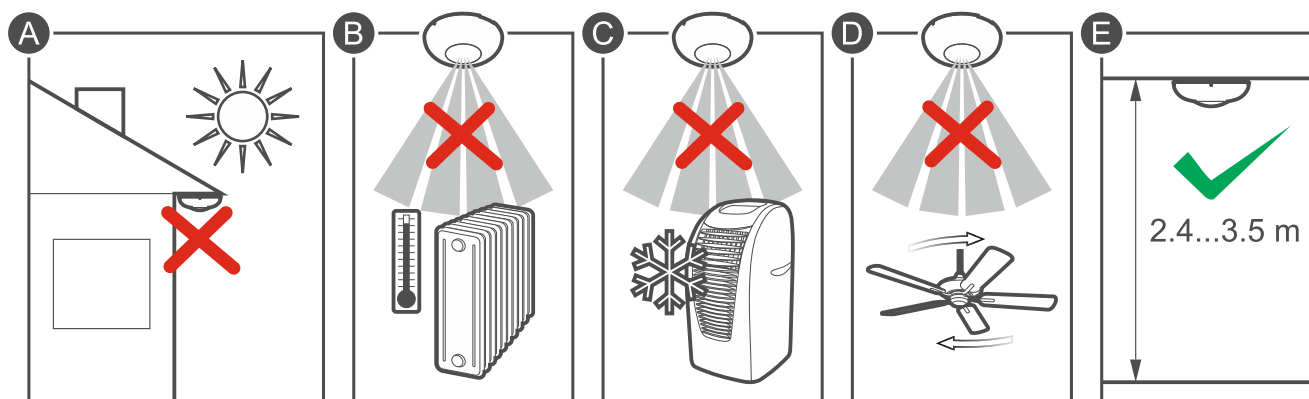


- The detector should be installed indoors, in spaces with normal air humidity.
- Do not install the detector outdoors (A).
- Do not point the detector towards heat sources (B), air conditioners (C) or fans (D).
- No object should obstruct the detector's field of view.
- Install the detector on the surface of the ceiling, at a height of 2.4...3.5 m (E).




If you want to install the detector at a height other than the recommended, make sure the coverage area of the detector mounted at that height is optimal. The maximum coverage area of the detector mounted at a height of 4.5 m is $\varnothing$ 8 m [50 m²].

Mounting

1. Turn the enclosure cover counter-clockwise (Fig. 10) and remove it (Fig. 11).

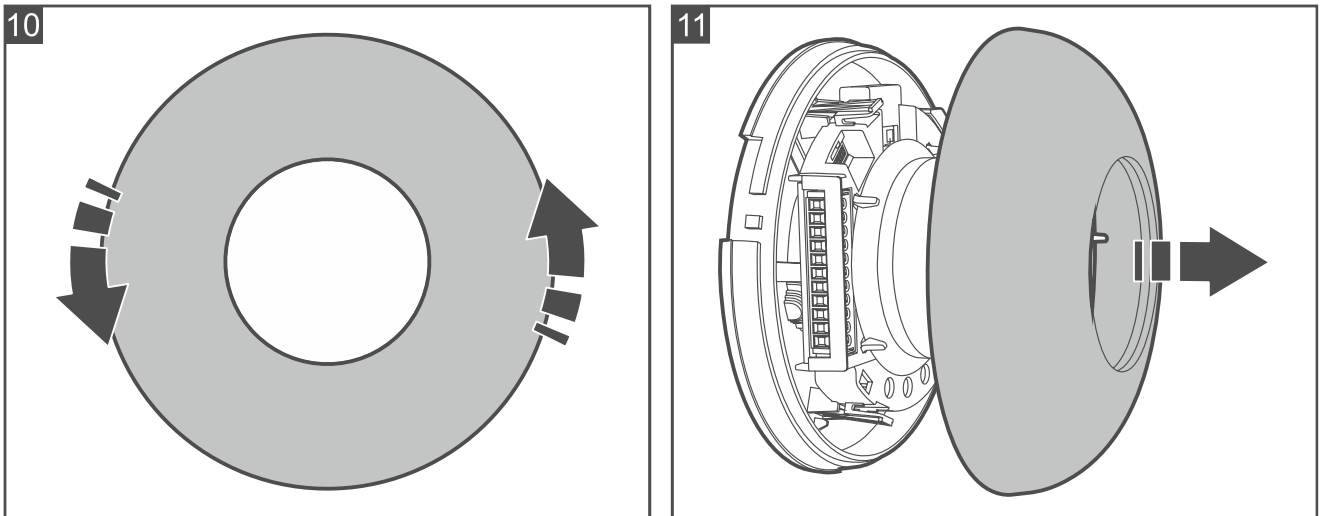

2. Configure the detector using the DIP-switches (see *DIP-switches* p. 5).
3. Place the enclosure base against the ceiling and mark the location of the mounting holes (Fig. 12).

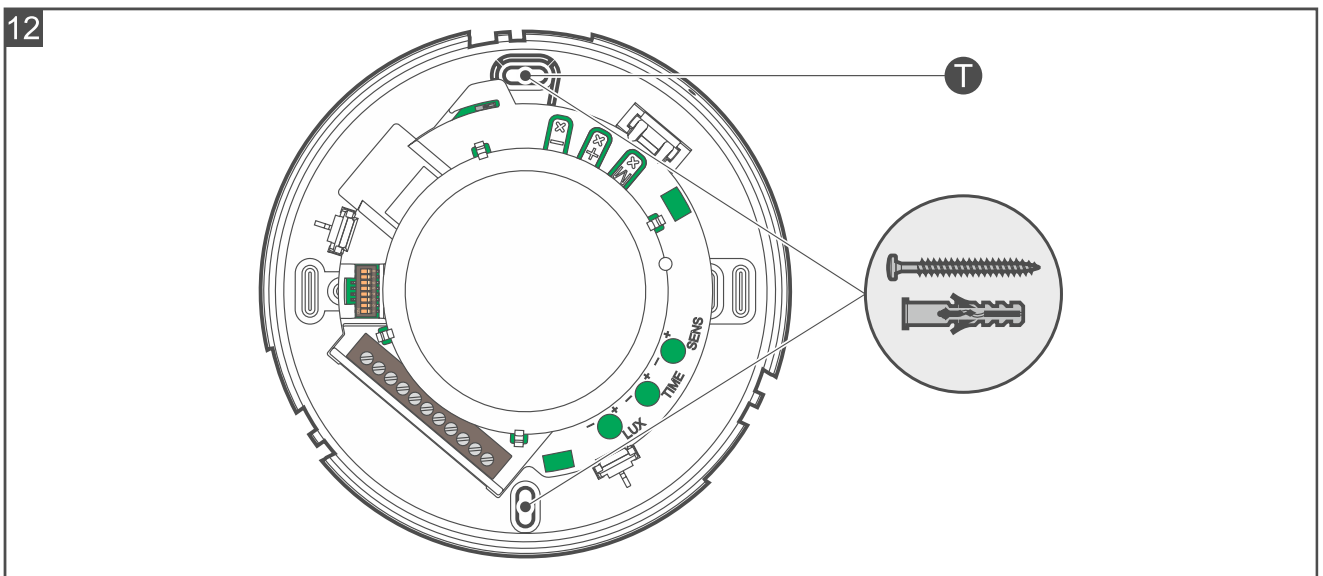


*In order for the detector to detect removal from the surface, fasten the screw in the place marked as **T** in Fig. 12.*


Figure 15 shows the places where additional mounting holes can be made. They are visible after you lift up the electronics module (see Fig. 13).

4. Drill the holes in the ceiling for wall plugs (anchors). The wall plugs provided with the detector are intended for concrete or brick. For other types of surface (drywall, styrofoam), use other appropriately selected wall plugs.






5. Press the catches and lift up the electronics module (Fig. 13).

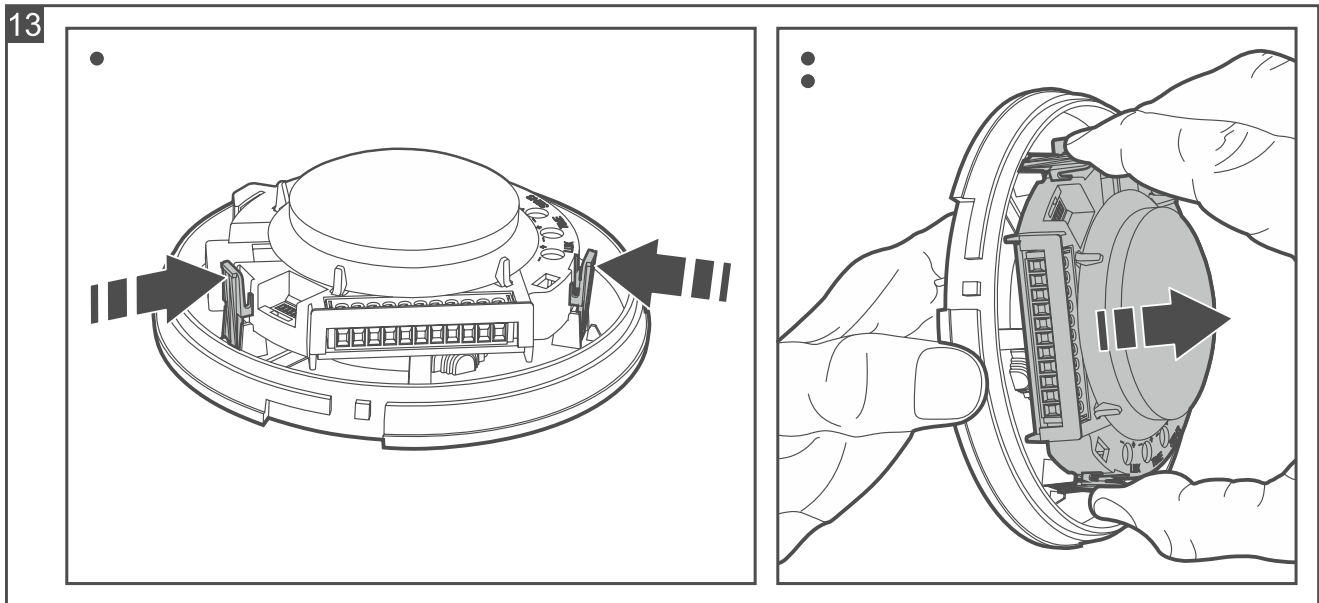


6. Make the opening for a cable in the enclosure base (Fig. 14).

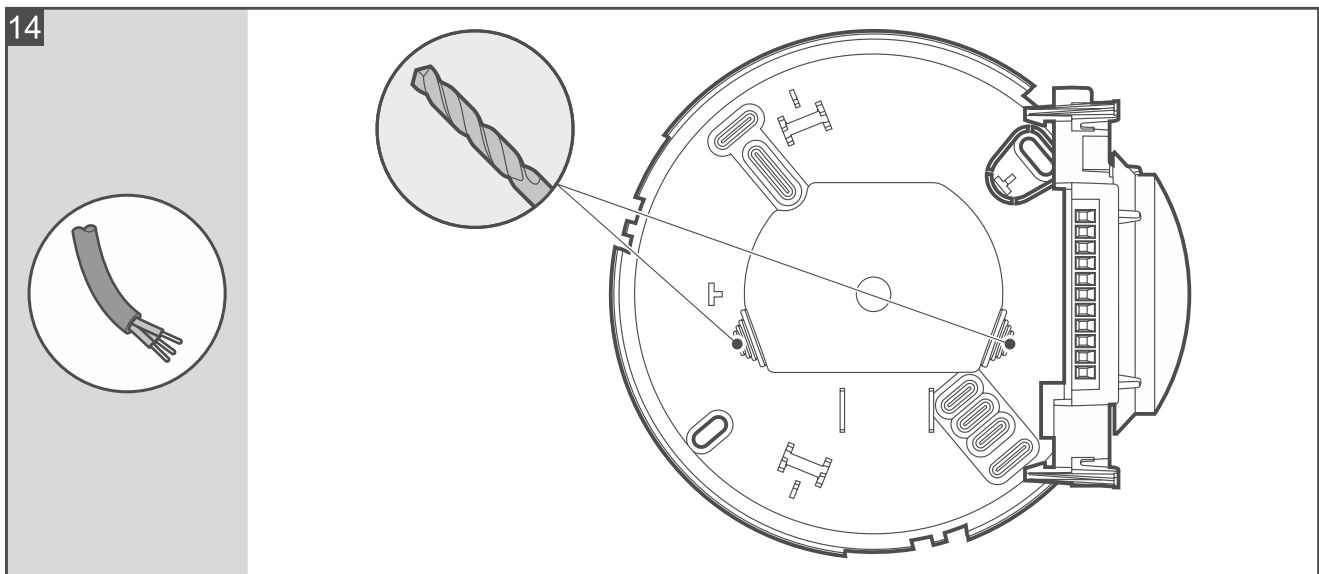

7. Run the cable inside the detector enclosure.
8. Secure the enclosure base to the ceiling with screws (Fig. 12 and 15).
9. Screw the wires to the detector terminals.
10. Press the electronics module down onto the base to lock it in place.
11. Power on the detector. The LED indicator will be flashing alternately different colors for 30 seconds to indicate the detector warm-up.
12. Once the LED indicator stops flashing, configure the remaining detector settings (see *Configuring the detector using the buttons / keyfob* p. 10).
13. Place the enclosure cover in the base (Fig. 16). Note the position of the cover locking screw holes.
14. Turn the cover clockwise until you feel resistance (Fig. 17).
15. Lock the cover in place with a screw (Fig. 18). The screw is in the bag provided with the detector. Use a Torx T6H screwdriver.

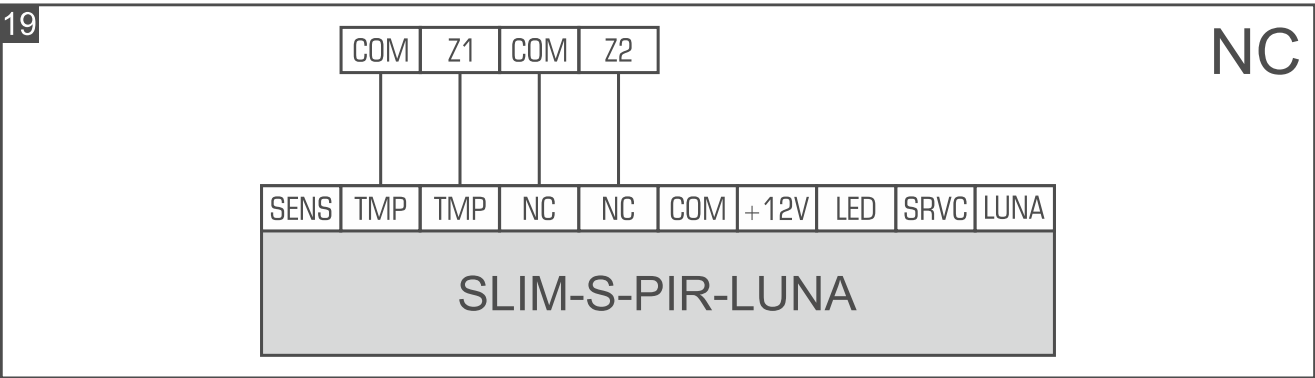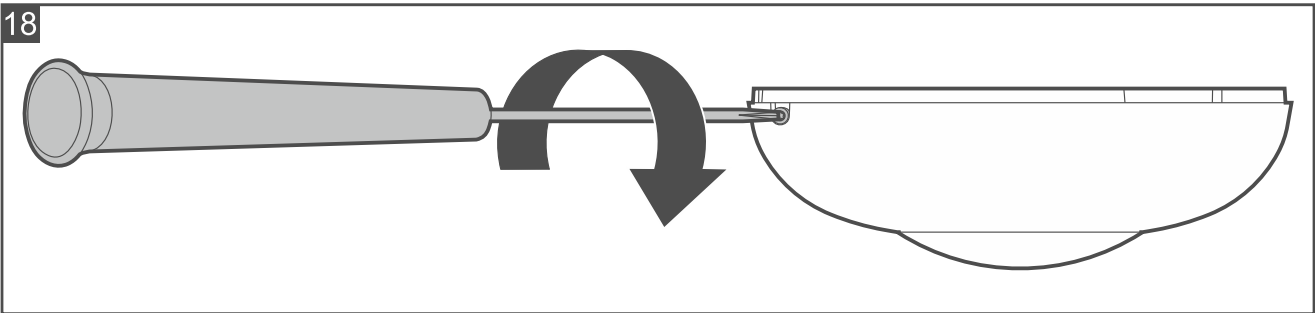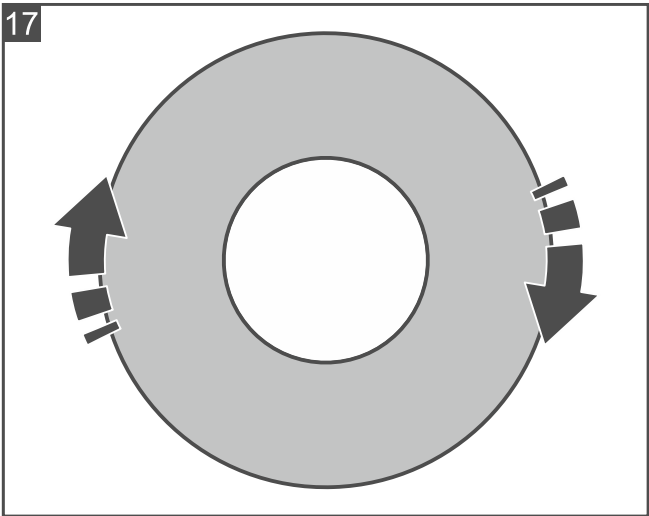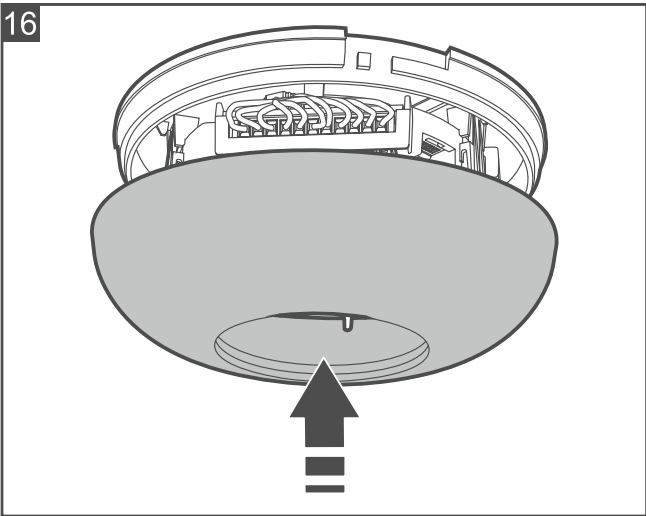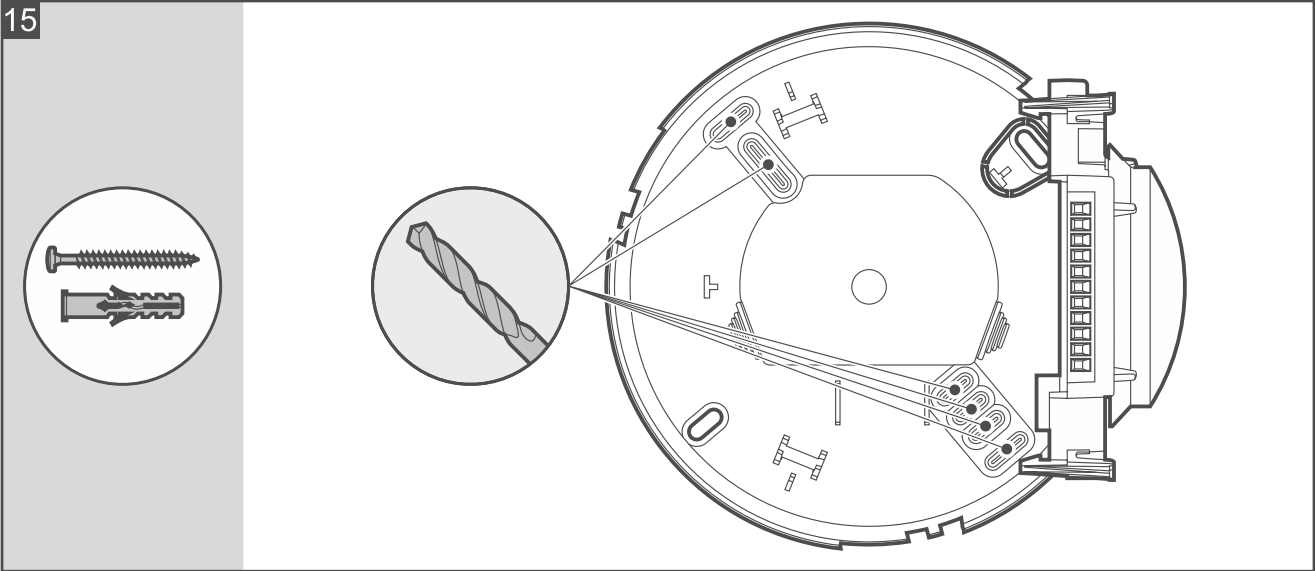

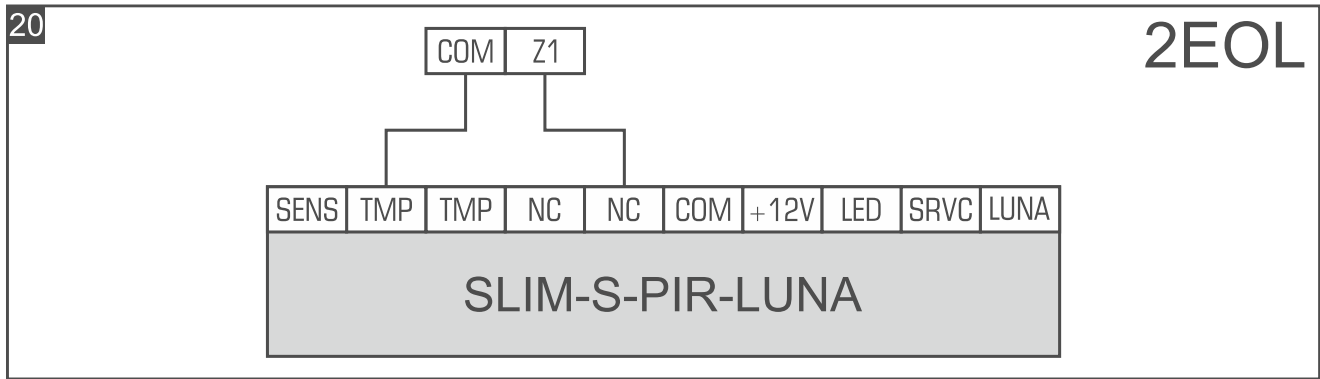

5. Configuring the detector using the buttons / keyfob

To configure the detector, you can use the buttons on the electronics module or the OPT-1 keyfob.



The OPT-1 keyfob is available in SATEL product range.

Description of detector buttons

- M** - starting configuration mode / ending configuration mode / running a function / saving changes and exiting a function.
- +** - next function / next value.
- −** - previous function / previous value.

Description of keyfob buttons

- ▲ - running a function / saving changes and exiting a function.
- - next function / next value.
- - previous function / previous value.

Starting configuration mode

Press **M** for 3 seconds or connect the SRVC terminal to common ground. The LED indicator will start flashing red.



In the configuration mode, the LED lighting is OFF.

Configuring the settings

1. Use the detector button (**+** / **−**) or the keyfob button (○ / ●) to find the function you want to run. The number of flashes of the LED indicator is the function number (see table 1).
2. Press **M** or the ▲ keyfob button to run the function. The LED indicator will start flashing green. The number of flashes is the currently set value (see table 1).
3. Use the detector button (**+** / **−**) or the keyfob button (○ / ●) to set a new value.
4. Press **M** or the ▲ keyfob button to save changes and exit the function. The LED indicator will start flashing red to indicate that you returned to the list of functions.

Function number	Description of function
1	Setting the first PIR sensor sensitivity You can program from 1 to 16 (1 - minimum; 16 – maximum). By default: 8 . When the function is running, the LED indicator indicates that the PIR sensor has detected motion: it is ON in red for 2 seconds. This enables the PIR sensor coverage area to be tested for the selected sensitivity.
2	Setting the second PIR sensor sensitivity You can program from 1 to 16 (1 - minimum; 16 – maximum). By default: 8 . When the function is running, the LED indicator indicates that the PIR sensor has detected motion: it is ON in red for 2 seconds. This enables the PIR sensor coverage area to be tested for the selected sensitivity.
3	Setting the LED indicator light color for indicating alarm / trouble You can program from 1 to 7 (1-7 – color). By default: 3 (blue). The LED indicator shows the selected color (for 2 seconds).
4	Selecting the lighting operation modes You can program 1 (remote control only), 2 (remote control and activation by motion) or 3 (activation by motion if the LUNA terminal is connected to common ground). By default: 1 (remote control only).
5	Setting the duration of motion activated lighting You can program 1 (5 s), 2 (15 s), 3 (30 s), 4 (60 s), 5 (90 s) or 6 (180 s). By default: 3 (30 s).
6	Selecting the lighting turn off method You can program 1 (instant turn off) or 2 (slow dim down). By default: 2 (slow dim down).

Table 1



The color of LED indicator light has an impact on the current consumption by the detector. The red, green and blue colors ensure the lowest current consumption. Selecting other colors will increase the current consumption by as much as several milliamperes.

Restoring factory settings

To restore the detector factory settings, press and hold **-** and **+** for 3 seconds in the configuration mode.

Ending configuration mode

Press **M** for 3 seconds or disconnect the SRVC terminal from common ground.


i If the configuration mode was started using the M button, it will be turned off automatically 20 minutes after the last operation performed by the user.

6. Walk test

i The LED indicator should be enabled during the walk test (see LED indicator p. 3).

1. Check if moving within the detector coverage area will make the LED indicator turn ON. Figure 21 shows the maximum coverage area of the detector.
2. If necessary, change the sensitivity of the sensor (see *Configuring the detector using the buttons / keyfob* p. 10).

21

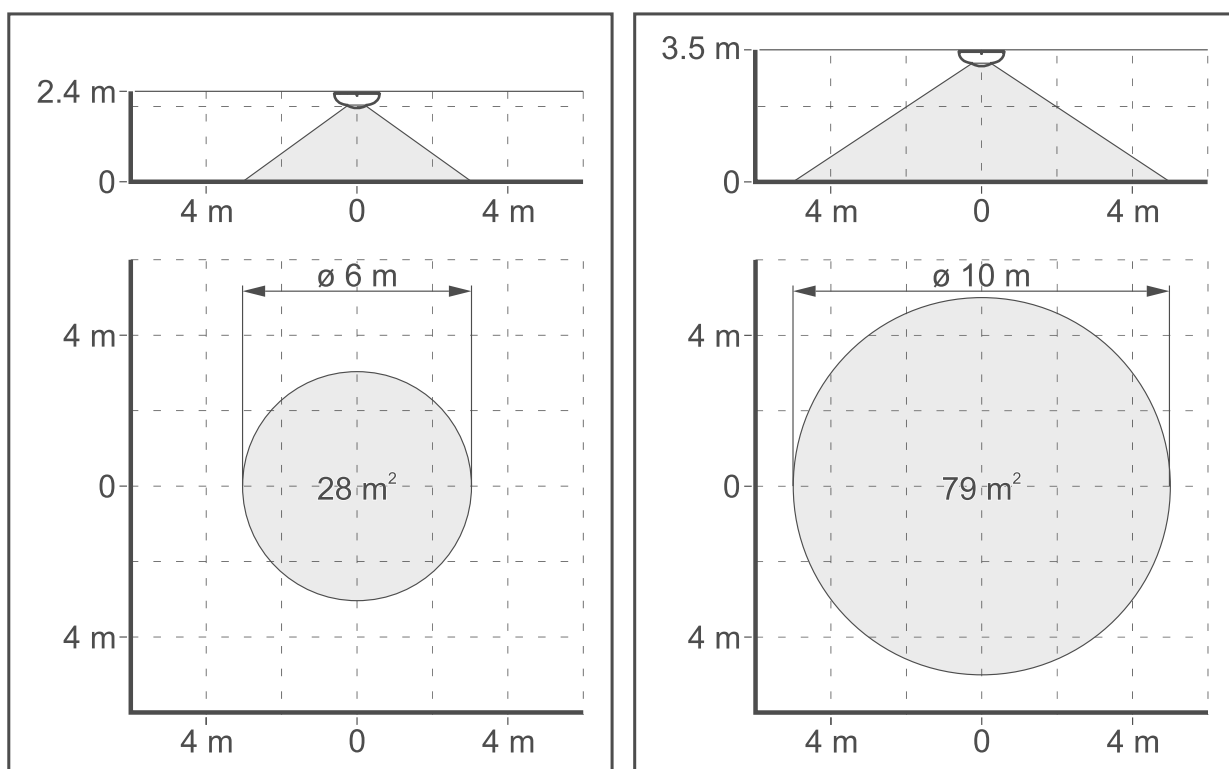

7. Specifications

Supply voltage	12 VDC $\pm$ 15%
Standby current consumption	11 mA
Maximum current consumption	65 mA
EOL resistors	2 x 1.1 k Ω / 2 x 4.7 k Ω / 2 x 5.6 k Ω
Outputs	
alarm (NC relay, resistive load).....	40 mA / 24 VDC
tamper (NC relay, resistive load)	40 mA / 24 VDC
Relay contact resistance	
alarm output.....	26 Ω
tamper output.....	26 Ω
Detectable speed	0.3...3 m/s

Alarm signaling period	2 s
Warm-up period	30 s
Recommended installation height.....	2.4...3.5 m
Maximum coverage area	
mounted at 2.4 m.....	ø 6 m [28 m ²]
mounted at 3.5 m.....	ø 10 m [79 m ²]
Security grade according to EN 50131-2-2	Grade 2
Compliance with standards	EN 50131-1, EN 50131-2-2, EN 50130-4, EN 50130-5
Environmental class according to EN 50130-5	II
Operating temperature range.....	-10°C...+55°C
Maximum humidity	93±3%
Dimensions	ø 120 x 37 mm
Weight.....	115 g

5 year warranty from date of manufacture